

Keypad setup

Technical features

Frequency : 433.92mhz

Distance : approx 80-100m(in free field)

Power supplier : 1.5V *2 PCS



Programming access code :

This keypad has the ability to operate 4 devices. The factory pre-set access codes are 1111/2222/3333 and 4444.

1. Start by entering the learn mode on your device (usually the 'code' or 'C' button)
2. Press the factory pre-set access code of the channel you wish to use (eg 1111) two times
3. Test the keypad has been paired with your opener (eg press 1111, the door/gate should operate)

Next – change the access code to your own PIN

1. Press 'B' followed by 999 999
2. Press the first number of the channel you wish to change + 'A' – For example, to change the PIN on channel 1 from 1111 to a different PIN press '1' then 'A'
3. Type your new, desired 4 digit PIN then 'B'
4. Type the new, desired 4 digit PIN then 'B' again to confirm

The door/gate should now operate when the PIN is entered. Simple set up is now complete.

Additional information

If you forget your PIN or wish to reset the device you can do this by removing the battery for 30 seconds and holding down 'A' whilst re inserting the battery. You will then need to follow these setup instructions again.

You can change the "installation code" if you desire, this is factory set as 999 999 as used above, to do this follow these steps

1. Press 'B' followed by 999 999
2. Press '1' followed by 'B'
3. Type a new 6 digit installation code followed by 'B'
4. Type the new 6 digit installation code followed by 'B' again
5. Installation code has now been changed (note resetting the device will revert the installation code back to 999 999)